



CenterFlow®
Seed Box Containers

**Store with Confidence.
Dispense with Speed.**

CenterFlow® Containers Dispense in 30 Seconds.



CenterFlow containers dispense in 30 seconds. For you, that means maximum efficiency. While CenterFlow containers are certainly fast, they're also rugged and reusable to deliver lasting value. Whether you're transporting and dispensing agricultural, granular, or pelletized materials, or even small manufacturing components, CenterFlow containers can provide a wide range of benefits for years and years to come.

CenterFlow Saves You Time

- Dispenses contents in 30 seconds
- Base interior features smooth sides and an industry-leading sloped funnel, allowing for complete emptying without tipping
- High weight capacity and 100% HDPE structural foam allows for more efficient material handling

CenterFlow Reduces Your Costs

- Reusable and 100% recyclable with positive ROI
- Extended utility with a 15-year life expectancy
- Eliminates waste and bag disposal costs

CenterFlow Optimizes Your Storage

- Enables you to double your storage
- Nest and vertically stack up to four high
- Reduces floor surface footprint, optimizing vertical warehouse space


CenterFlow Improves Employee and Product Safety

- Safe one-person gate operation
- Protects against rodents and contaminants
- Ensures content security with slide gate rail design, lids, sliding discharge door, and security tags

CenterFlow® Containers

Designed for a Wide Range of Applications. Including Yours.


CenterFlow® containers are as versatile as they are innovative. Whatever job you need to do, you can count on CenterFlow to deliver the quality, efficiency, and safety you demand.

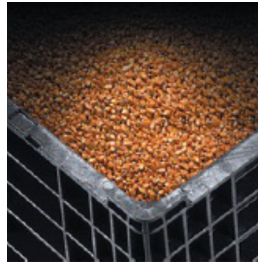

Agriculture



Component Parts

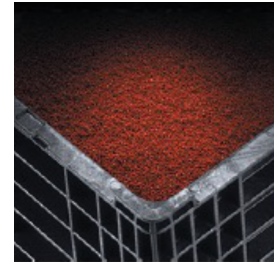

Plastic Pellets

Tight-Fitting Lids

Features reinforced ribbing and corner stacking supports.

Rugged Construction

Resistant to water and mild acids and withstands temperatures of -20°F to 120°F (-28.8°C to 48.8°C).

Cross-Member Reinforcement

Ring section contains molded-in cross members for additional lateral strength and reinforcement.

Document Holders & Identification

Clear plastic sleeves hold identification tags and forms. Two sleeves are standard, one each on the 45" ends. Other options are available.

Adhesive Signs



In addition to the standard clear plastic document holders, 9" x 6" custom signs are available.

QR Tracking Tags

Optional 4" x 2" data storage tags rivet beneath the lid.

Color-Coded Safety Latch

Custom color provides quick and easy visibility to indicate that latches are secure.

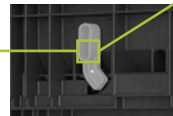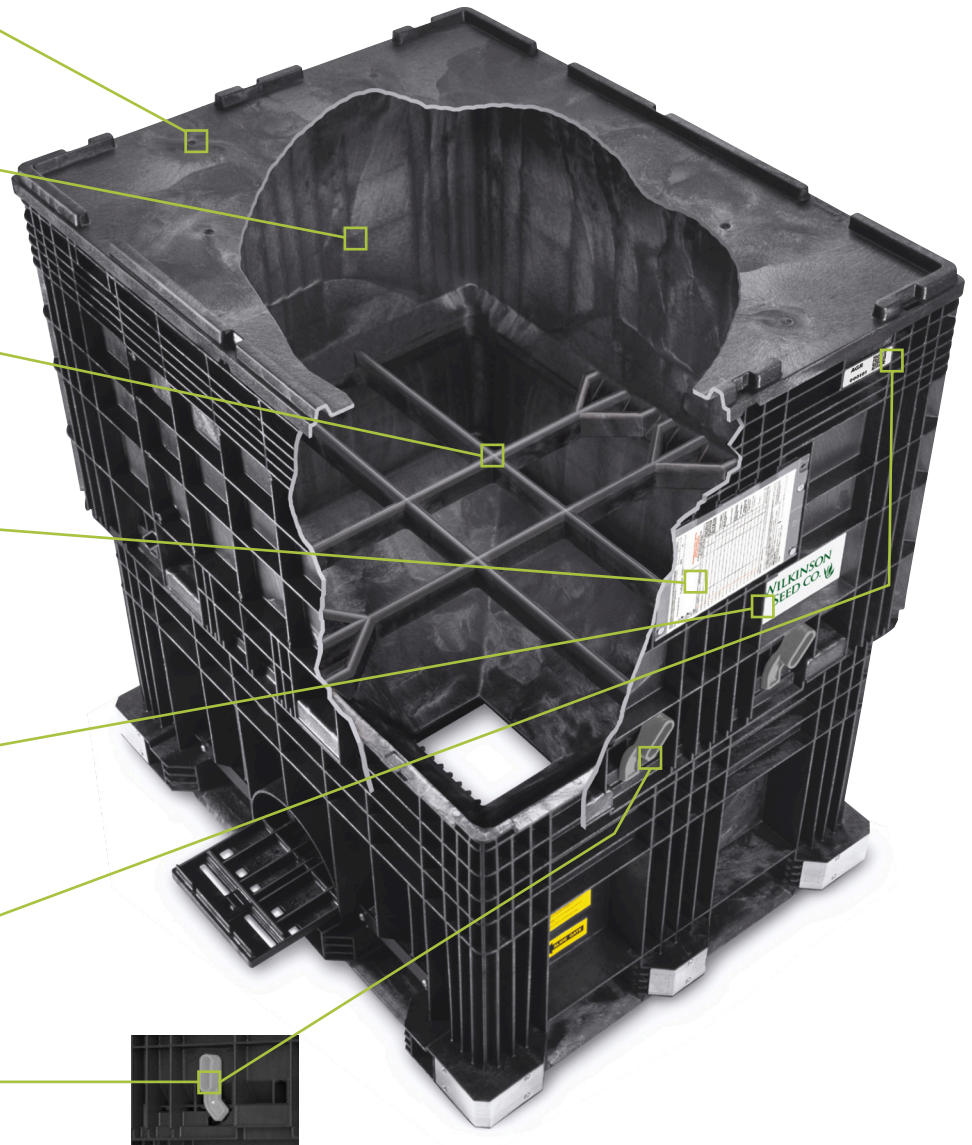

Warranty

Products are protected by a 1-Year limited warranty against workmanship and/or material defects subject to normal handling procedures.

Safety and Handling Tips


To use CenterFlow containers (CFC) correctly:

- Always strap down a CFC before transporting
- Do not stack anything on top of a CFC except another CFC
- Lifting equipment must be rated at a minimum of 3,500 lbs. (1,588 kg)
- Always use molded-in handles when assembling and nesting CFC s
- Lids must be secured during transport

Four Sizes for Your Flowable Materials

CenterFlow delivers the versatility you need to maximize your efficiency.


With CenterFlow, you'll always have the right-sized container for every job.

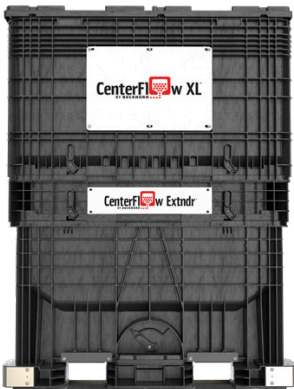

X-Large
68.0 cu. ft.



Large
58.3 cu. ft.

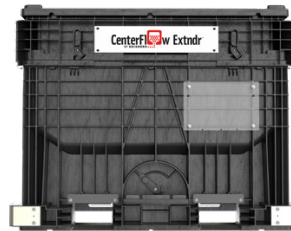

Medium
29.5 cu. ft.



Small
19.8 cu. ft.

**For Detailed Specifications of
All CenterFlow Container Products:**

Scan



Call Us Today
(403) 279-8940

customerservice@ak-westinc.com
Www.ak-westinc.com.com

Get 17% More Holding Capacity. Lower Storage Costs.



We know that storage optimization is essential to your business. That's why we developed the CenterFlow Extndr collar attachment. The Extndr collar attachment enables you to add more storage to your existing CenterFlow container. In fact, the nine-inch Extndr collar attachment allows you to store up to 500 additional pounds of flowable material without taking up more warehouse space. The CenterFlow Extndr collar attachment can provide a wide range of flexibility and benefits for years and years to come.



**For Detailed Specifications of
All CenterFlow Container Products:**

Scan



**Call Us Today
(403) 279-8940**

customerservice@ak-westinc.com
www.ak-westinc.com

Gives You Significantly More Storage

- Adds 17% more holding capacity
- Holds up to 50 units of larger seed sizes more consistently
- Enables vertical stacking and nesting up to four containers
- Reduces floor surface footprint, optimizing vertical warehouse space
- Delivers better cubic space optimization for return truck logistics

Optimizes Your Current Container Fleet

- Can be preinstalled or retrofitted with any existing CenterFlow container
- An ideal intracompany seasonal carryover and storage solution
- Adds optional secondary branding location

Designed and Engineered for Your Success

- Patented CenterFlow Extndr collar attachment
- Durable HDPE construction




Installation, Safety, and Handling Guide

Installing CenterFlow Extndr Collar Attachment onto Existing Container

If Container Is Assembled

- 1 Remove top collar
- 2 Place the CenterFlow Extndr collar attachment onto the bottom base container
- 3 Place top collar onto the CenterFlow Extndr collar attachment and follow with lid
- 4 Lock all latches — 8 on the collar and 8 on the CenterFlow Extndr collar attachment

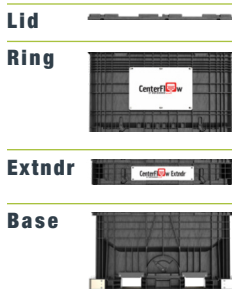

If Container Is Nested

- 1 Remove lid
- 2 Place the CenterFlow Extndr collar attachment in the inverted position onto top collar while nested
- 3 Lock all latches from top collar to the CenterFlow Extndr collar attachment
- 4 Replace lid onto the CenterFlow Extndr collar attachment



CenterFlow Extndr Collar Attachment Increased Capacity

- Net holding capacity of the CenterFlow container with the CenterFlow Extndr collar attachment is 3,000 lbs.
- The container can be stacked up to four high at full capacity
- The CenterFlow Extndr collar attachment adds approximately 44 lbs. and nine inches in height

Assembling CenterFlow® Container with CenterFlow® Extndr® Collar Attachment

Recommended Procedure: The CenterFlow Extndr and Collar Attachment Stay Mounted Together

- 1 Remove lid from nested assembly, starting at the corner
- 2 Confirm 8 latches connecting the top collar to the CenterFlow Extndr collar attachment are in the locked position
- 3 Confirm 8 unused latches on the CenterFlow Extndr collar attachment are in the unlocked position
- 4 Using the molded-in handles, lift collar/CenterFlow Extndr collar attachment (with two people) and flip 180 degrees
 - If using a flipping device, clamp across both the collar and the CenterFlow Extndr collar attachment
- 5 Place collar/CenterFlow Extndr collar attachment assembly onto the container base
- 6 Lock 8 latches on the CenterFlow Extndr collar attachment to bottom container base
- 7 Replace lid onto top collar



Alternative Procedure: The CenterFlow Extndr Collar Attachment and Collar Are Separated

- 1 Remove lid from nested assembly, starting at the corner
- 2 Unlock 8 latches connecting the CenterFlow Extndr collar attachment to the top collar and, using the molded-in handles, lift the CenterFlow Extndr collar attachment (with two people) from collar
- 3 Flip the CenterFlow Extndr collar attachment 180 degrees and place on the ground
- 4 Using the molded-in handles, lift the collar (with two people), flip 180 degrees, and place on the ground
- 5 Place the CenterFlow Extndr collar attachment onto the container base and lock all 8 latches
- 6 Lift and place top collar onto the CenterFlow Extndr collar attachment and lock all 8 latches
- 7 Replace lid onto top collar

Disassembly

To disassemble the CenterFlow Extndr collar attachment from the base container, reverse processes above.

Storage, Handling, Transportation, and Safety Tips

- Use ONLY ONE CenterFlow Extndr collar attachment per box. Always place the CenterFlow Extndr collar attachment between the bottom base and top collar
- All 16 latches must be locked when container/CenterFlow Extndr collar attachment is in use
- Never stack anything on top other than another CenterFlow container
- Never move more than one filled CenterFlow container at a time
- When transporting full or empty containers, always secure with straps or other cargo control devices
- Do not transport the container when it is full without closing and securing the slide gate
- Follow instructions on the container safety label or contact us for safe handling tips

For Detailed Specifications of All CenterFlow Container Products:

Scan



Call Us Today
(403) 279-8940

customerservice@ak-westinc.com
www.ak-westinc.com